

Deliverable 2.3

Default behavioural parameter sets for Automated Vehicles (AVs)

Version: 1.0

Date: 02.07.2018

Authors: Peter Sukennik, Lukas Kautzsch, PTV Group

The sole responsibility for the content of this document lies with the authors. It does not necessarily reflect the opinion of the European Union. Neither the EASME nor the European Commission are responsible for any use that may be made of the information contained therein.



This project has received funding from the European Union's Horizon 2020 research and innovation programme under grant agreement No. 723201



Document Control Page

Title		Default behavioural parameter sets for AVs						
Creator		Peter	Sukennik					
Editor		Char	Charlotte Fléchon					
Reviewer/s		Charlotte Fléchon Bernard Gyergyay Syrus Gomari						
Brief Descript	ion	Deliv	erable 2.3					
Contributors		Luka	s Kautzsch					
Type (Deliver	able/Milestone)	Deliv	erable					
Format								
Creation date		5/201	5/2018					
Version numb	per	1.0						
Version date		02.07.2018						
Last modified	by							
Rights								
Audience		☐ Internal ☐ Public ☐ Restricted, access granted to: EU Commission						
Action requested		 □ To be revised by Partners involved in the preparation of the Deliverable □ For approval of the WP Manager □ For approval of the Internal Reviewer (if required) □ For approval of the Project Coordinator 						
Deadline for approval								
Version	Date		Modified by	Comments				



Table of contents

Int	troduction	4
Un	nderstanding the recommendations	4
1.2	Recommended numerical values	4
PT	V Vissim version	4
Ne	ew features connected to driving behaviour	5
Dri	iving logics	5
Co	operation & communication functions	5
De	efault driving behaviour parameters	6
Ne	ew features	6
Fo	llowing behaviour	6
2.1	General recommendation	7
2.2	Recommended numerical values	8
La	ne changing behaviour	8
3.1		
5.2	Recommended numerical values	11
lm	port of driving behaviour parameters	12
Fu	ıture changes	12
	Ur 1.1 1.2 PT Ne Dr Co Ne Fo 2.1 2.2 La 3.1 3.2 La Siç 5.1 5.2	1.2 Recommended numerical values. PTV Vissim version. New features connected to driving behaviour. Driving logics. Cooperation & communication functions. Default driving behaviour parameters. New features. Following behaviour. 2.1 General recommendation. 2.2 Recommended numerical values. Lane changing behaviour. 3.1 General recommendation. 3.2 Recommended numerical values. Lateral behaviour. Signal control behaviour. 5.1 General recommendation.



1 Introduction

1.1 Understanding the recommendations

This document defines the driving behaviour parameter sets for 4 driving logics that were defined and used within the CoExist project¹. The behaviour parameter sets are mainly applicable and usable with the microscopic traffic simulation software PTV Vissim. Adjustments to different types of models, in simulation software other than PTV Vissim, can be inferred from the recommendations given here, but caution must be taken especially when the driving behaviour parameters are based on a different type of model (e.g. models apart from Wiedemann).

Recommendations are based on an analysis of empirical data collected in Helmond (the Netherlands), cosimulations results delivered by VEDECOM and several simulation tests done by PTV. More details on the data collection will be available in the deliverable D2.6: technical report on data collection and validation process. Another prerequisite to determining the driving behaviour parameter sets was developing the closed loop connection for co-simulations between the AV control logic of VEDECOM and the AV simulator PreScan from TASS International, which is described in the deliverable D2.2: technical report on connecting CAV control logic and CAV simulator.

1.1.1 General recommendation

The sub-chapters "general recommendation" indicate in which direction it is recommended to change default driving parameters' values (an increase, a reduction or no change of the default value), which are designed for conventional traffic. The strength of the change should correlate with a known information or a reasonable assumption.

1.1.2 Recommended numerical values

All numerical values of feature settings (flags to be set on/off) need to be understood as recommended values based on the results of the analysis of the data collection and of the co-simulations undertaken within the context of the CoEXist project. Please note that these data and results do not cover all possible scenarios and the whole complexity of the problem. Thus, different values might be used if another assumption is made or other results/data are available.

1.2 PTV Vissim version

All parameters or features mentioned bellow are available starting from PTV Vissim 11 release version (planned release date: end of September 2018). For consortium partners & CoExist purposes, a development version is available since May 2018.

¹ See deliverable D1.4 : Scenario specification for eight uses cases and its appendix A : driving logics



This project has received funding from the European Union's Horizon 2020 research and innovation programme under grant agreement No. 723201



1.3 New features connected to driving behaviour

Besides the recommendations for existing driving behaviour parameters, this document covers also recommendations for new features implemented into PTV Vissim (development powered by the CoEXist project). Description of new developments is covered by deliverable D2.4: PTV Vissim extension – new features and improvements. For an explanation of all new functionalities and also AV-related how-to, a webinar was held on June 21, 2018². An AV-related PTV Vissim guide (D2.5) will be prepared and released in October 2018.

1.4 Driving logics

Separate driving parameter sets were defined for each driving logic defined in the CoEXist project³, namely:

- Rail safe, this driving logic requires besides the appropriate parameters also special modelling approach to be in line with the control logic principles. This driving logic has a deterministic behaviour, that fits quite well to automatically moving machineries as we find in closed environments of ports or factory. It is characterized the presence of a physical lane separation or big lateral distances, a pre-defined path that the vehicles follow, no lane change, no un-signalized intersection and the brick wall stop distance is kept at all time. The modeller need to keep these specificities in mind.
- Cautious, the vehicle respects the road-code and always adopts a safe behaviour. The brick wall
 distance is always respected, unsignalized intersections and lane changes are possible but the
 vehicle will keep quite large gaps.
- Normal, very similar to a human driver with the additional capacity of measuring distances and speeds of the surrounding vehicles thanks to its sensor suite.
- All knowing, with perfect perception and prediction leading mainly to smaller gaps for all manoeuvres and situations. A kind of cooperative behaviour is expected.

1.5 Cooperation & communication functions

Some implications of simple cooperation & communication functions might be simulated by changing the driving behaviour parameters and appropriate settings in PTV Vissim. For modelling of complex cooperation & communication functions additional actions might be necessary – using one of the available interfaces (COM, drivermodel.dll or drivingsimulator.dll) to mimic complex communication and cooperation strategies.

³ For a detailed description of the driving logics and their principles see the appendix A of D1.4.



² See in appendix A of D2.4



2 Default driving behaviour parameters

2.1 New features

The recommended use of all newly developed features is summarised in the table below.

Table 1 New features and recommended use for AVs

	recommended setting for new features								
driving logic	enforce absolute breaking distance (EABK)	use implicit stochastics	number of interaction vehicles*	increased desired acceleration					
rail safe	ON	OFF	1	100%					
cautious	ON	OFF	1	100%					
normal	OFF	OFF	1	100-110%					
all knowing	OFF	OFF	>1	110%					

^{*} for advanced sensors and/or communicating vehicles choose more than 1 if information from more than one vehicle ahead is available

2.2 Following behaviour

This chapter covers the parameters that can be found on the PTV Vissim Tab "Following" and "Car following model" of a driving behaviour set based on the Wiedemann 99 following model. The Wiedemann 74 following model should be used only for very simple AV modelling because of the lower number of adjustable parameters.



2.2.1 General recommendation

Table 2 General recommendation for the Wiedemann following behaviours

				drivir	ng logic	
	model	parameter**	rail safe	cautious	normal	all knowing
		CC0 – Standstill distance (m)	def	def	def	smaller
		CC1 – Spacing time (s)	def/higher*	def/higher*	def	smaller
		CC2 – Following variation (m)	def/smaller	def/smaller	smaller	smaller
		CC3 – Threshold for entering "following" (s)	def/higher	def/higher	def	def
<u>_</u>	99 uı	CC4 – Negative "following" threshold (m/s)	Smaller	def/smaller	def/smaller	smaller
following behaviour	Wiedemann 99	CC5 – Positive "following" threshold (m/s)	Smaller	def/smaller	def/smaller	smaller
ng bel	Wiec	CC6 – Speed dependency of oscillation (10 ⁻⁴ rad/s)	def/smaller	def/smaller	def	smaller
ollowi		CC7 – Oscillation acceleration (m/s²)	def/smaller	def/smaller	def/smaller	smaller
4		CC8 – Standstill acceleration (m/s²)	Smaller	smaller	def	def
		CC9 – Acceleration at 80 km/h (m/s²)	Smaller	smaller	def	def
	*	ax	def	def	def	smaller
	W74**	bxadd	def/higher*	def/higher*	def	smaller
	≥	bxmult	def/higher*	def/higher*	def	smaller

^{*} if EABK⁴ is on, brick wall stop distance is guaranteed

⁴ EABK = enforce absolute breaking distance (new feature released in PTV Vissim 11)



This project has received funding from the European Union's Horizon 2020 research and innovation programme under grant agreement No. 723201

^{**} see PTV Vissim manual for a detailed description

^{***} Wiedemann 74, might be used for very simple models only



2.2.2 Recommended numerical values

Table 3 Numerical recommendation for the Wiedemann following behaviour

				driving logic					
	model	parameter**	rail safe	cautious	normal	all knowing	def		
		CC0 – Standstill distance (m)	1.5	1.5	1.5	1	1.5		
		CC1 – Spacing time (s)	1.5*	1.5*	0.9	0.6	0.9		
		CC2 – Following variation (m)	0	0	0	0	4		
		CC3 – Threshold for entering "following" (s)	-10	-10	-8	-6	-8		
<u>_</u>	66 uu	CC4 – Negative "following" threshold (m/s)	-0.1	-0.1	-0.1	-0.1	-0.35		
haviou	Wiedemann 99	CC5 – Positive "following" threshold (m/s)	0.1	0.1	0.1	0.1	0.35		
ng bel	Wiec	CC6 – Speed dependency of oscillation (10 ⁻⁴ rad/s)	0	0	0	0	11.44		
following behaviour		CC7 – Oscillation acceleration (m/s²)	0.1	0.1	0.1	0.1	0.25		
-		CC8 – Standstill acceleration (m/s²)	2	3	3.5	4	3.5		
		CC9 – Acceleration at 80 km/h (m/s²)	1.2	1.2	1.5	2	1.5		
	* *	ax	2	2	2	1	2		
	W74**	bxadd	2*	2*	2	1.5	2		
	*	bxmult	3*	3*	3	2	3		

^{*} if EABK¹ is on, brick wall stop distance is guaranteed

2.3 Lane changing behaviour

This chapter covers the parameters that can be found on the PTV Vissim Tab "Lane Change" controlling the lane changing behaviour.

^{**} see PTV Vissim manual for detailed description

^{***} might be used for very simple models only



2.3.1 General recommendation

Table 4 General recommendation for lane changing behaviour

		driving logic								
	rail	safe	cautious**		normal		all kno	owing		
parameter for necessary lane change*	own	trailing vehicle	own	trailing vehicle	own	trailing vehicle	own	trailing vehicle		
maximum deceleration	n.a.	n.a.	smaller/ def	smaller/ def	def	smaller/ def	def	higher/ def		
- 1 m/s per distance	n.a.	n.a.	smaller/ def	smaller/ def	def	def	def	smaller/ def		
accepted deceleration	n.a.	n.a.	smaller/ def	smaller/ def	def	def	def	higher/ def		

^{*}necessary lane change means a lane change which is necessary in order to follow a defined route (it is not overtaking because of higher own desired speed)

n.a. = not applicable

Table 5 General recommendation for lane changing behaviour functionalities

	driving logic						
behavioral functionality	rail safe	cautious**	normal	all knowing			
Advanced merging*	n.a.	on***/off	on***	on			
Cooperative lane change*	n.a.	on***/off	on***	on			
Safety distance reduction factor	n.a.	higher+EABD	def/smaller	def/smaller			
min. headway (front/rear)	n.a.	higher	def	def			
max. deceleration for cooperative braking	n.a.	smaller***	smaller***/def	def			

^{*}depends on technical equipment and implemented connectivity & cooperation functions

n.a. = not applicable

^{**} EABD (enforce absolute breaking distance) must be on

^{**} EABD (enforce absolute breaking distance) must be on

^{***} If the AV cannot detect that the other vehicle wants to change lanes, the value should be off/zero



2.3.2 Recommended numerical values

Table 6 Numerical recommendation for lane changing behaviour

	driving logic									
	rail	safe	cautio	ous**	normal		all knowing		def	
parameter for necessary lane change*	own	trailing vehicle	own	trailing vehicle	own	trailing vehicle	own	trailing vehicle	own	trailing vehicle
maximum deceleration	n.a.	n.a.	-3.5	-2.5	-4	-3	-4	-4	-4	-3
- 1 m/s per distance	n.a.	n.a.	80	80	100	100	100	100	100	100
accepted deceleration	n.a.	n.a.	-1	-1	-1	-1	-1	-1.5	-1	-1

^{*}necessary lane change means a lane change which is necessary in order to follow a defined route (it is not overtaking because of higher own desired speed)

n.a. = not applicable

Table 7 Numerical recommendation for lane changing behaviour functionalities

		driving logic						
behavioral functionality	rail safe	cautious**	normal	all knowing	def			
Advanced merging*	n.a.	on***/off	on***	on	on			
Cooperative lane change*	n.a.	on***/off	on***	on	off			
Safety distance reduction factor	n.a.	1+EABD	0.6	0.5	0.6			
min. headway (front/rear)	n.a.	1	0.5	0.5	0.5			
max. deceleration for cooperative braking	n.a.	-2.5	-3	-6	-3			

^{*}necessary lane change means a lane change which is necessary in order to follow a defined route (it is not overtaking because of higher own desired speed)

2.4 Lateral behaviour

Setting in lateral behaviour allows to set minimum lateral distances to other vehicle classes individually. Due to the lack of empirical or reasonable data, a recommendation cannot be given. Hence, the modeller needs to decide which assumption he/she wants to take into account in lateral behaviour according to the use case – e.g. it is possible to specify higher lateral distance when the vehicle is overtaking a cyclist and lower lateral distance when a CAV is overtaking another CAV.

2.5 Signal control behaviour

This chapter covers the parameters that can be found on the PTV Vissim Tab "Signal Control" controlling the reactions on signals and the behaviours when approaching a signal.



^{**} EABD (enforce absolute breaking distance) must be on

^{**} EABD (enforce absolute breaking distance) must be on; n.a. = not applicable



2.5.1 General recommendation

Table 8 General recommendation for signal control behaviour

	driving logic							
attribute	rail safe*	cautious**	normal	all knowing				
behaviour at amber signal	continuous check	continuous check	one decision***	one decision				
behaviour at red/amber signal	stop	stop	stop/go	stop/go				
reaction time distribution	-	-	-	-				
reduced safety distance factor	higher+EABD	higher+EABD	def	def/lower				
reduced safety start upstream of stop line	lower/def	lower/def	def	def/higher				
reduced safety end upstream of stop line	lower/def	lower/def	Def	def/higher				

^{*}only protected phase possible in AV-certified environment

2.5.2 Recommended numerical values

Table 9 Numerical recommendation for signal control behaviour

		driving logic						
attribute	rail safe*	cautious**	normal	all knowing	def			
behavior at amber signal	continuous check	continuous check	one decision***	one decision	cont. Check			
behavior at red/amber signal	stop	stop	stop	stop	go			
reaction time distribution	-	1	1	-	-			
reduced safety distance factor	1	1	1	1	0.6			
reduced safety start upstream of stop line	100	100	100	100	100			
reduced safety end upstream of stop line	100	100	100	100	100			

^{*}only protected phase possible in AV-certified environment

^{**} probably protected phases only, EABD must be on

^{***} requires that the AV can remember that it has made a decision for that particular signal head already, else: continuous check

^{**} probably protected phases only, EABD must be on

^{***} requires that the AV can remember that it has made a decision for that particular signal head already, else: continuous check



3 Import of driving behaviour parameters

Currently, all recommended parameter values can be entered into a Vissim model manually, using copy/paste functionality or imported from another PTV Vissim model file. For comfortable import of all parameters at once, a PTV Vissim file was created and is available to all project partners. In the future, all settings may become a part of Vissim standard installation and/or an example delivered with PTV Vissim (= available for all users).

4 Future changes

Automated driving is developing fast and it is difficult to foresee in which direction. Thus, the recommended values might be subject to change in the future. The GUI of PTV Vissim and the way it is developed and structured allow the user to work with a wide spectrum of assumptions and to calibrate the model with the newest data available.

The proposed driving parameter values will be revised after getting the feedback from the CoEXist partner cities Gothenburg, Helmond, Milton Keynes and Stuttgart in work package 4, where several use cases will be modelled.