

Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

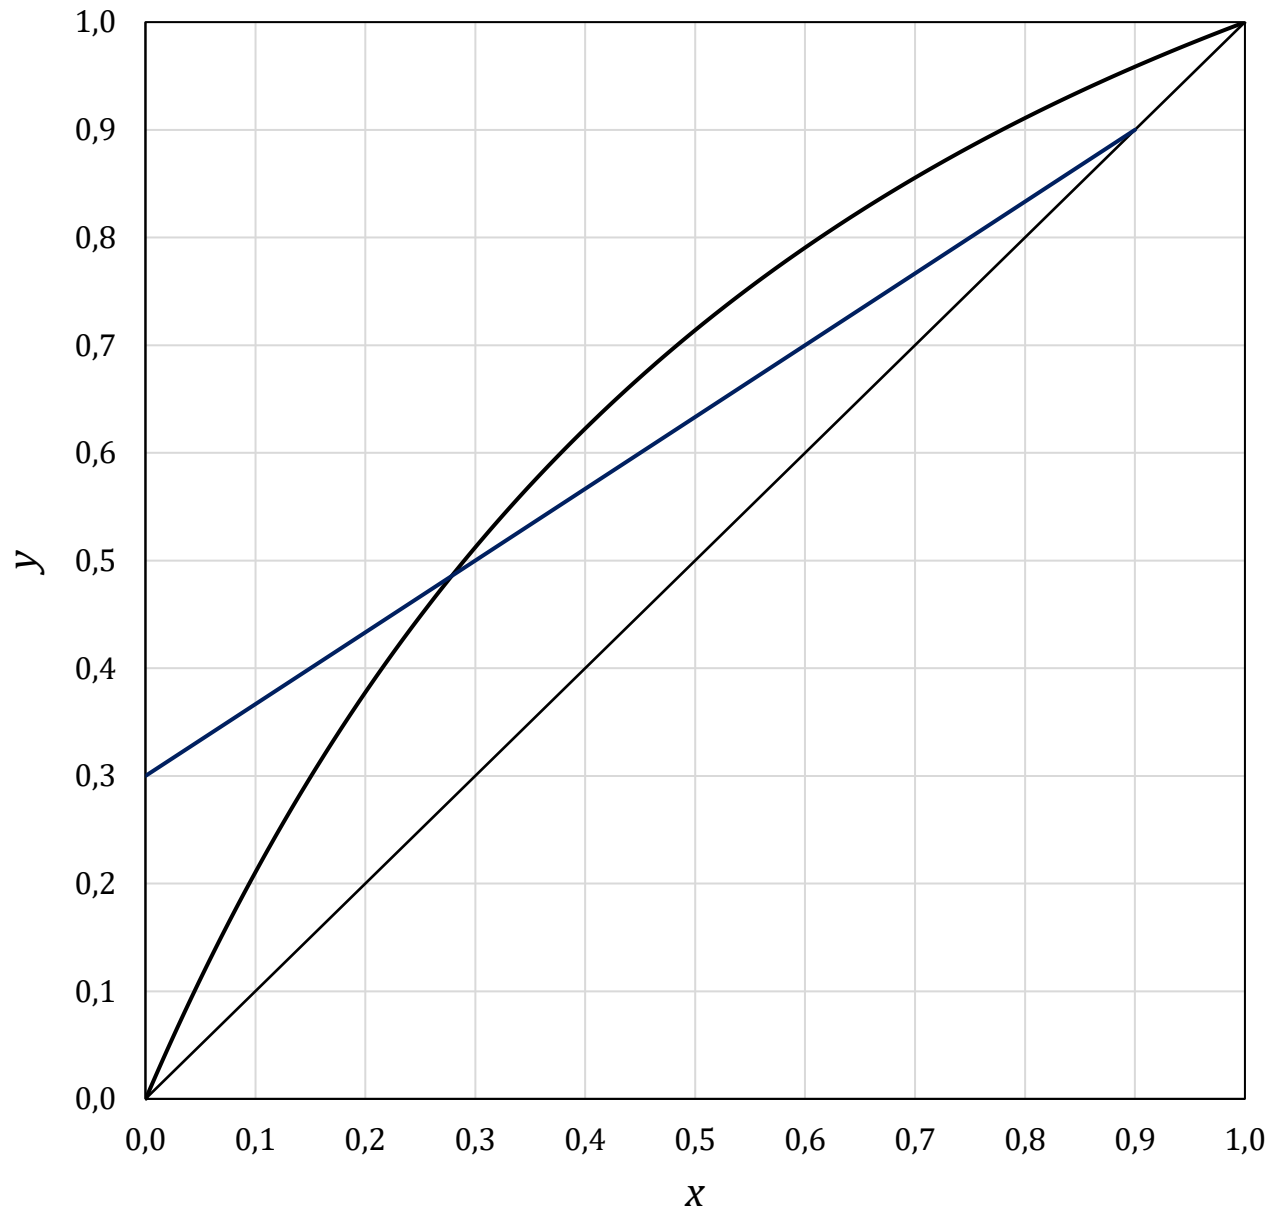


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

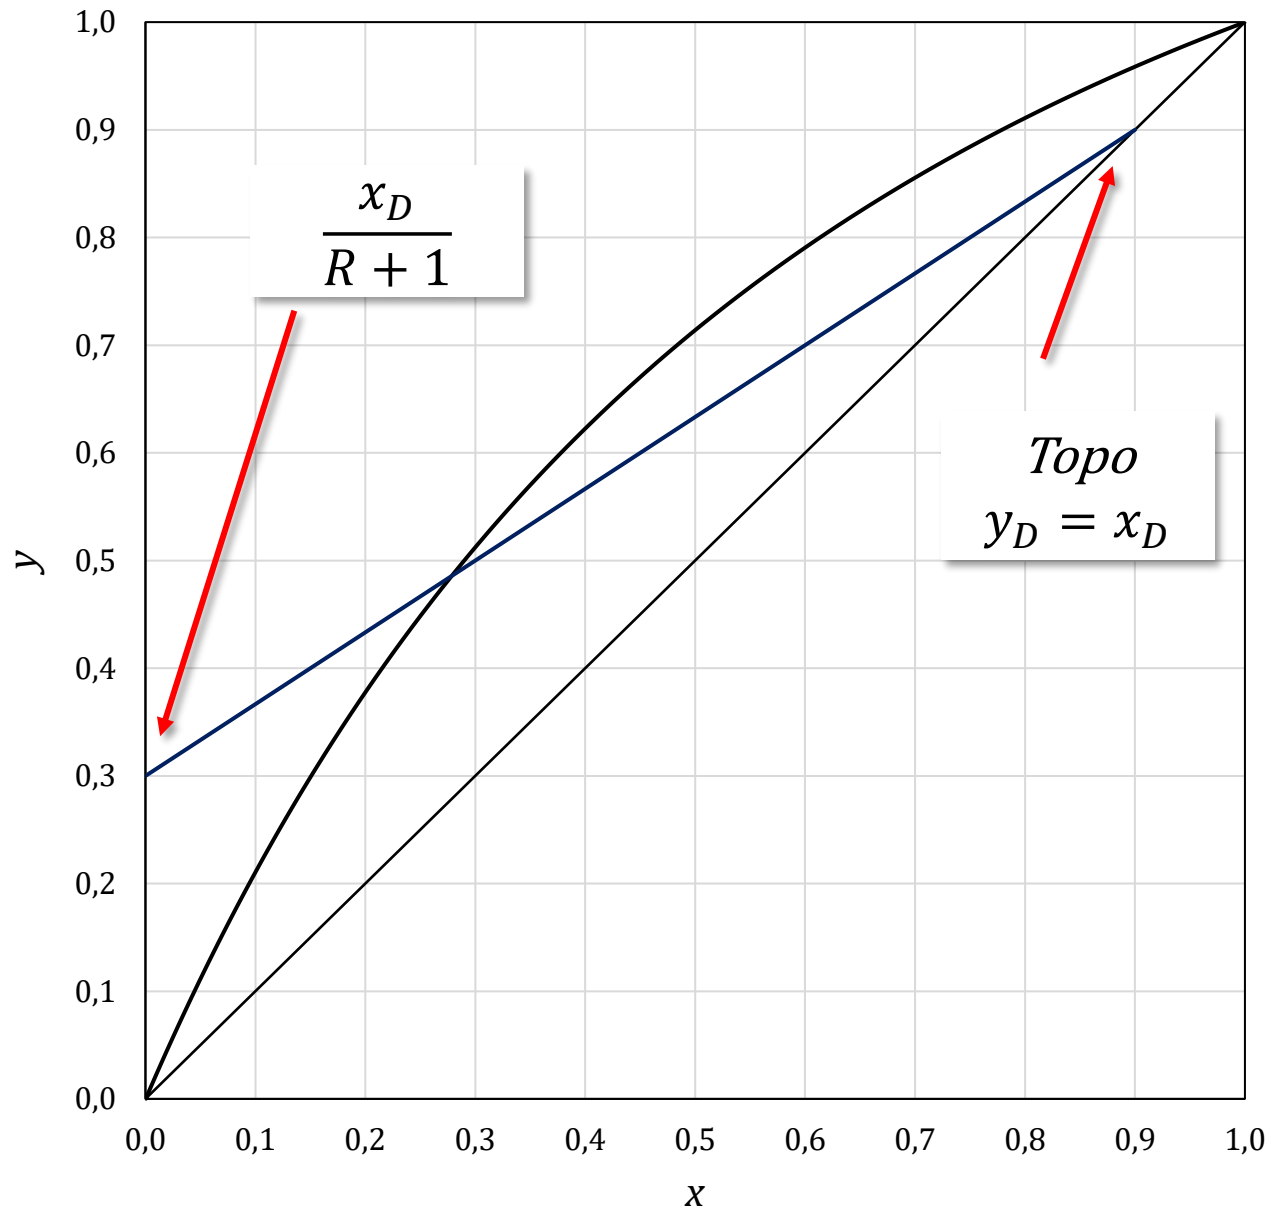


Diagrama xy da mistura benzene / tolueno a 101,3 kPa

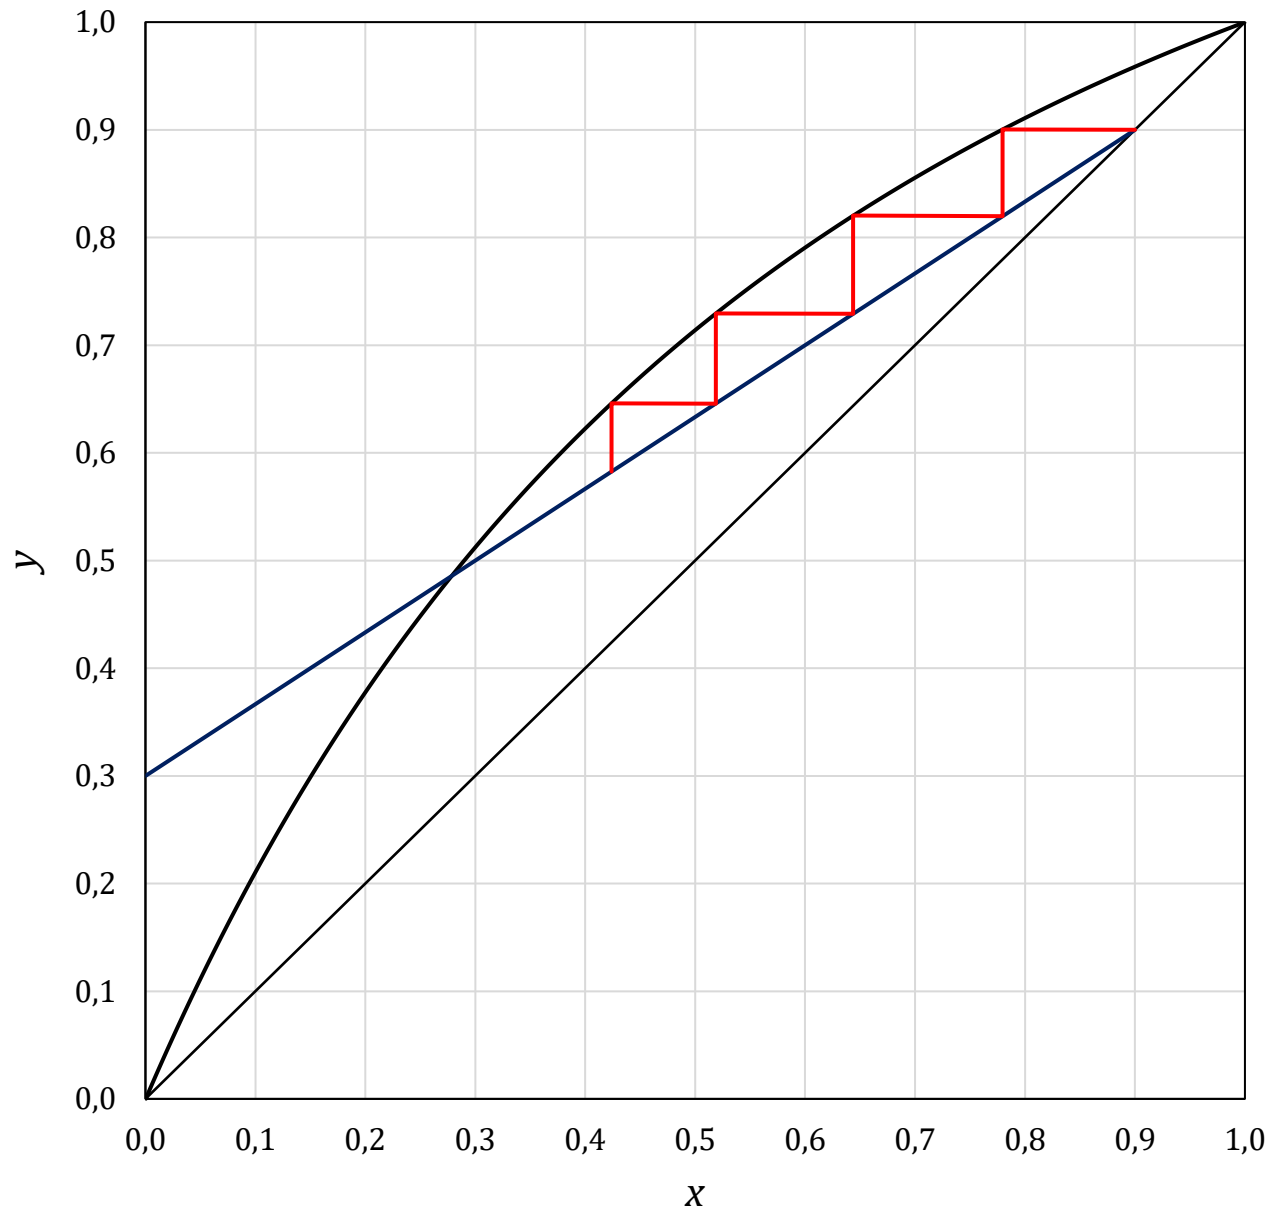


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa


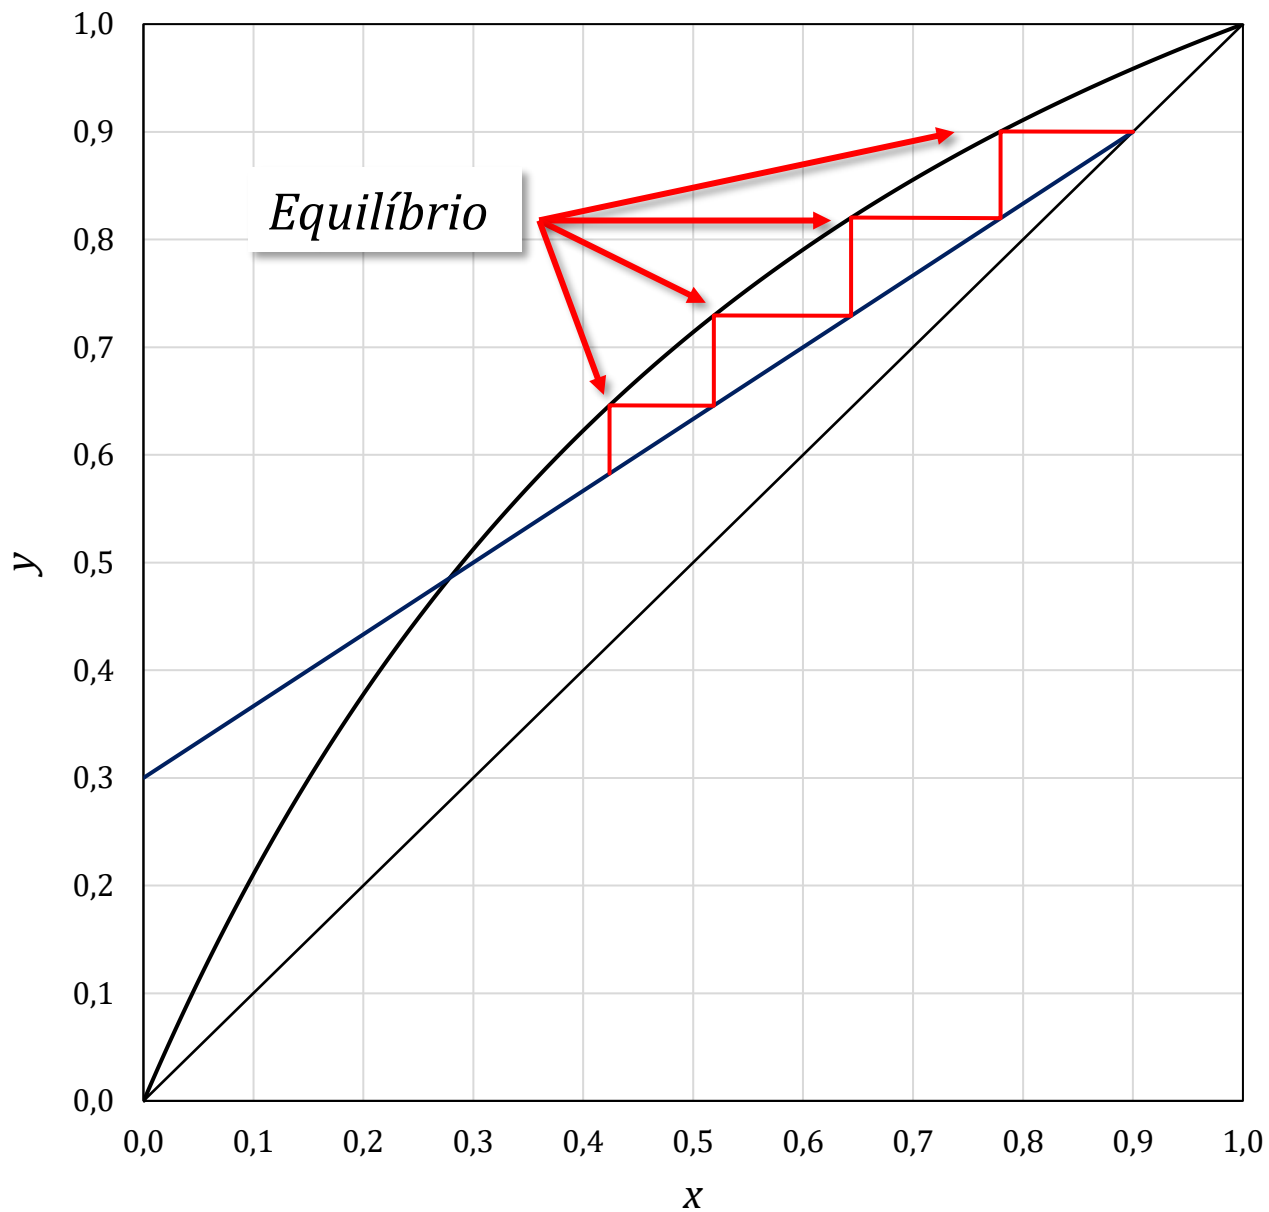


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

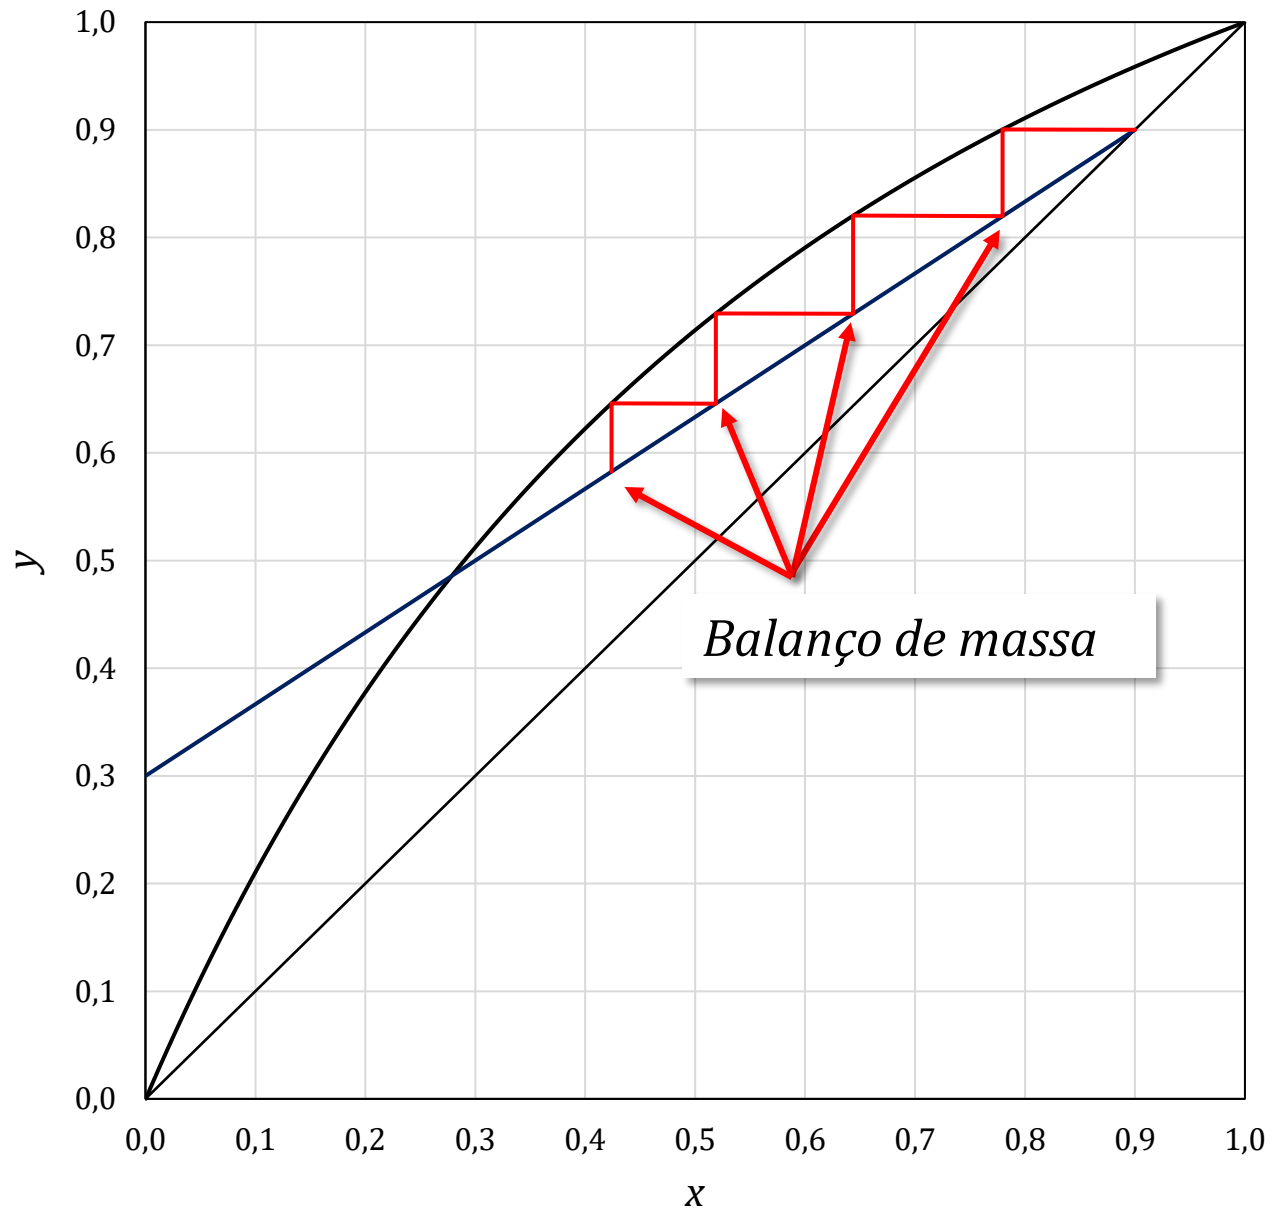

Balanco de massa

Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

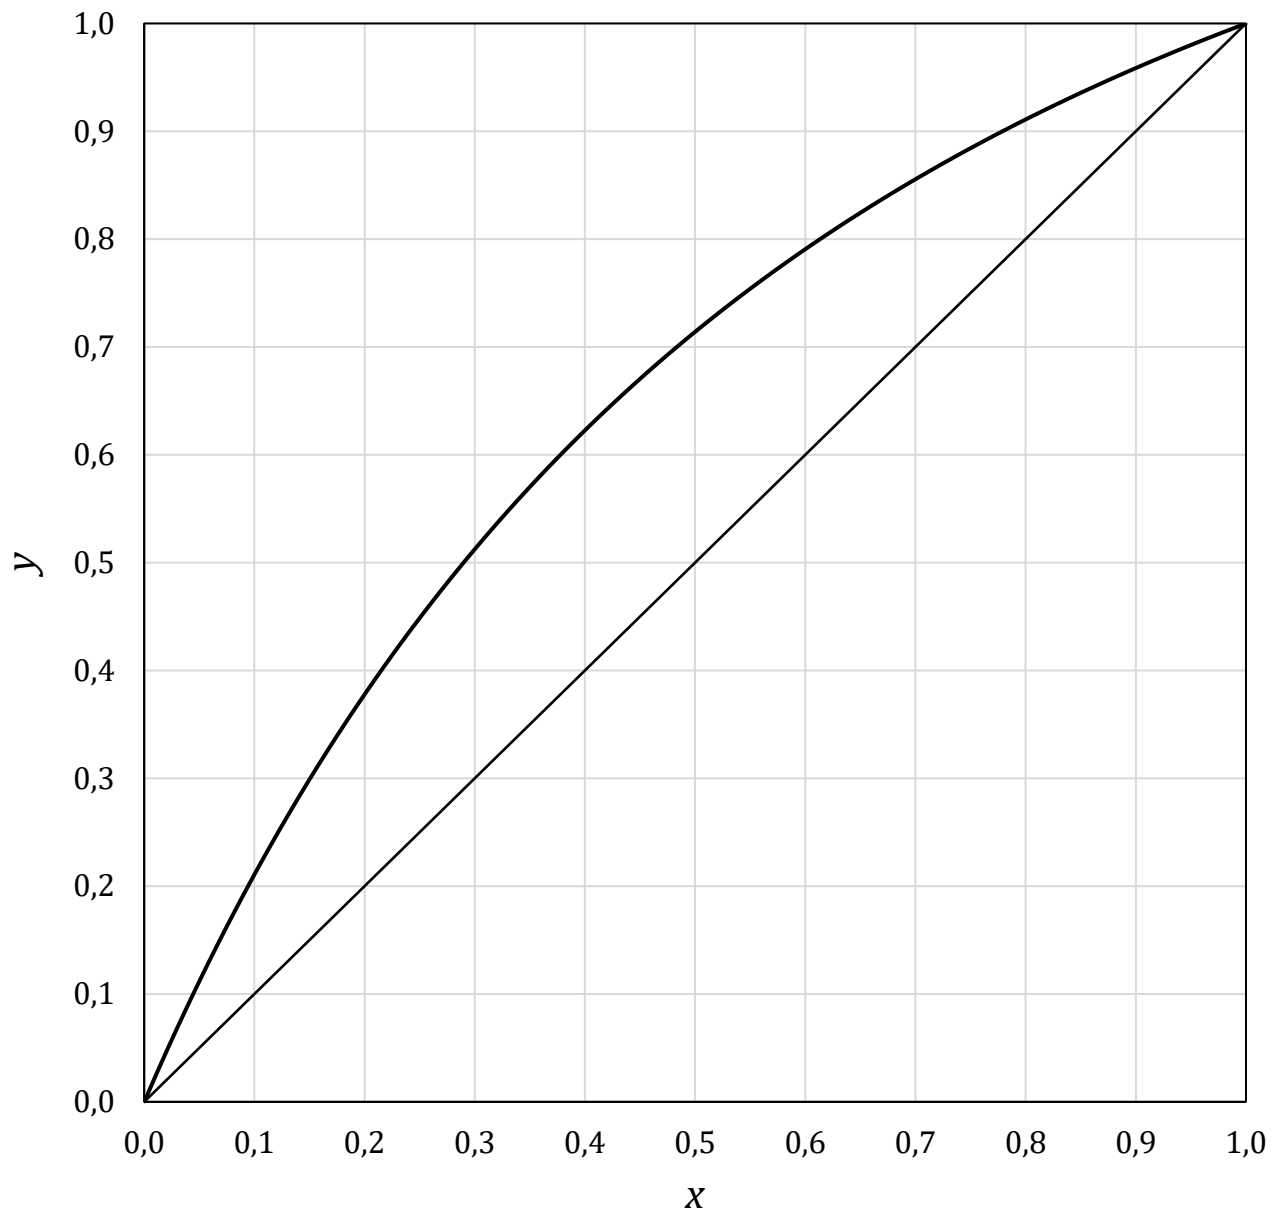


Diagrama xy da mistura benzene / tolueno a 101,3 kPa

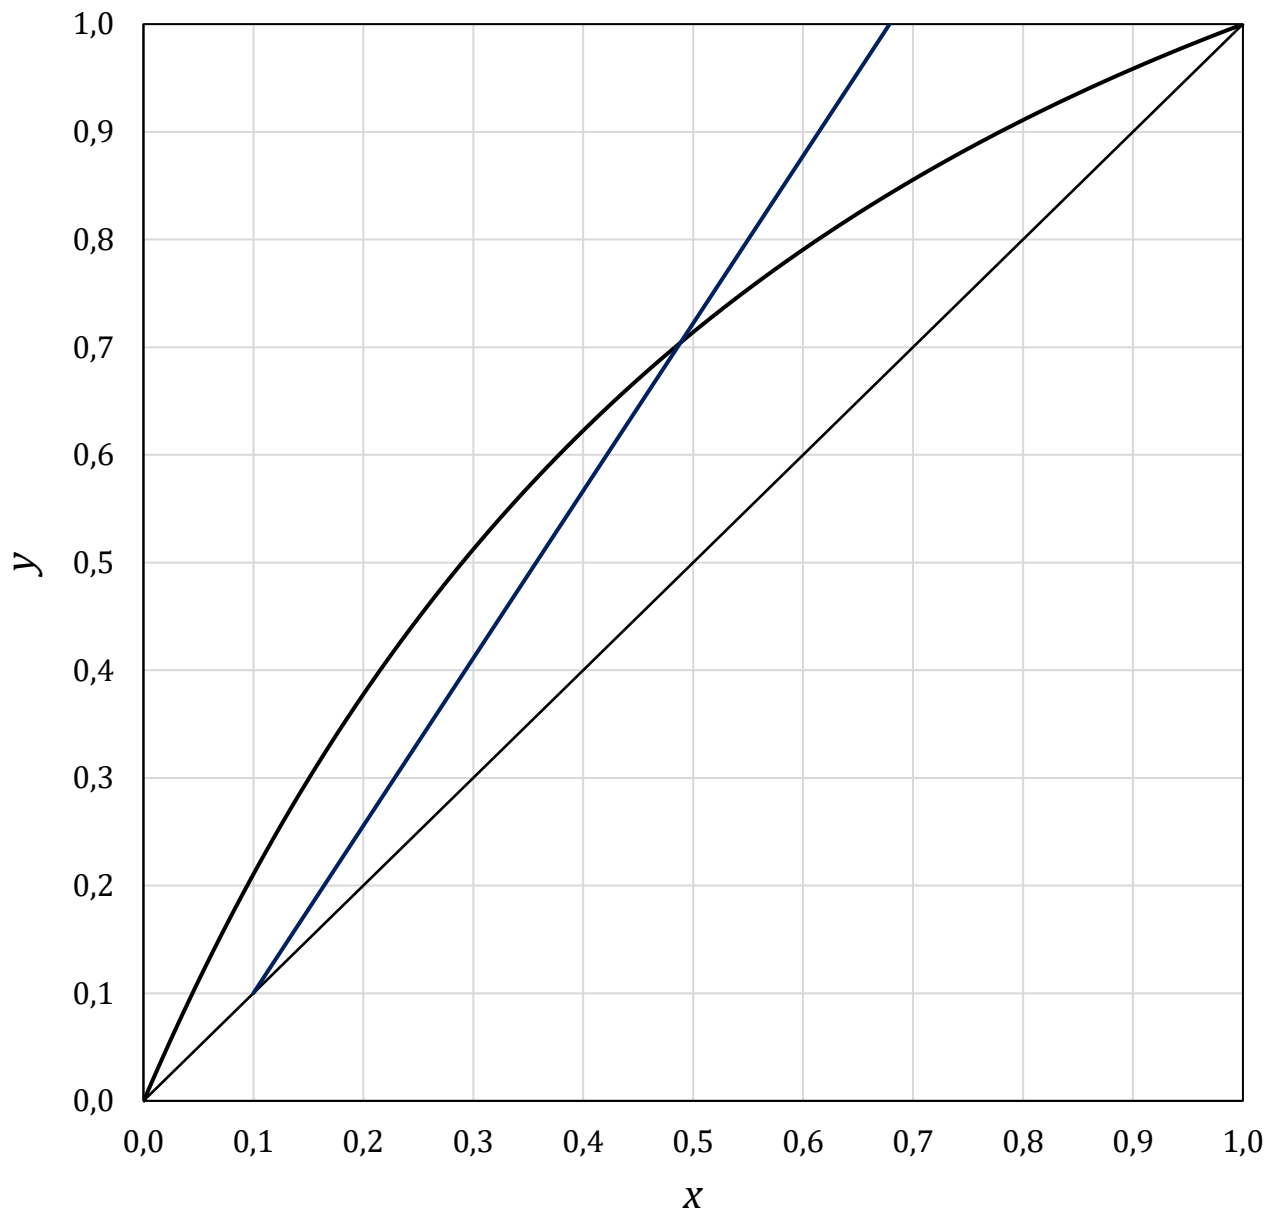


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa




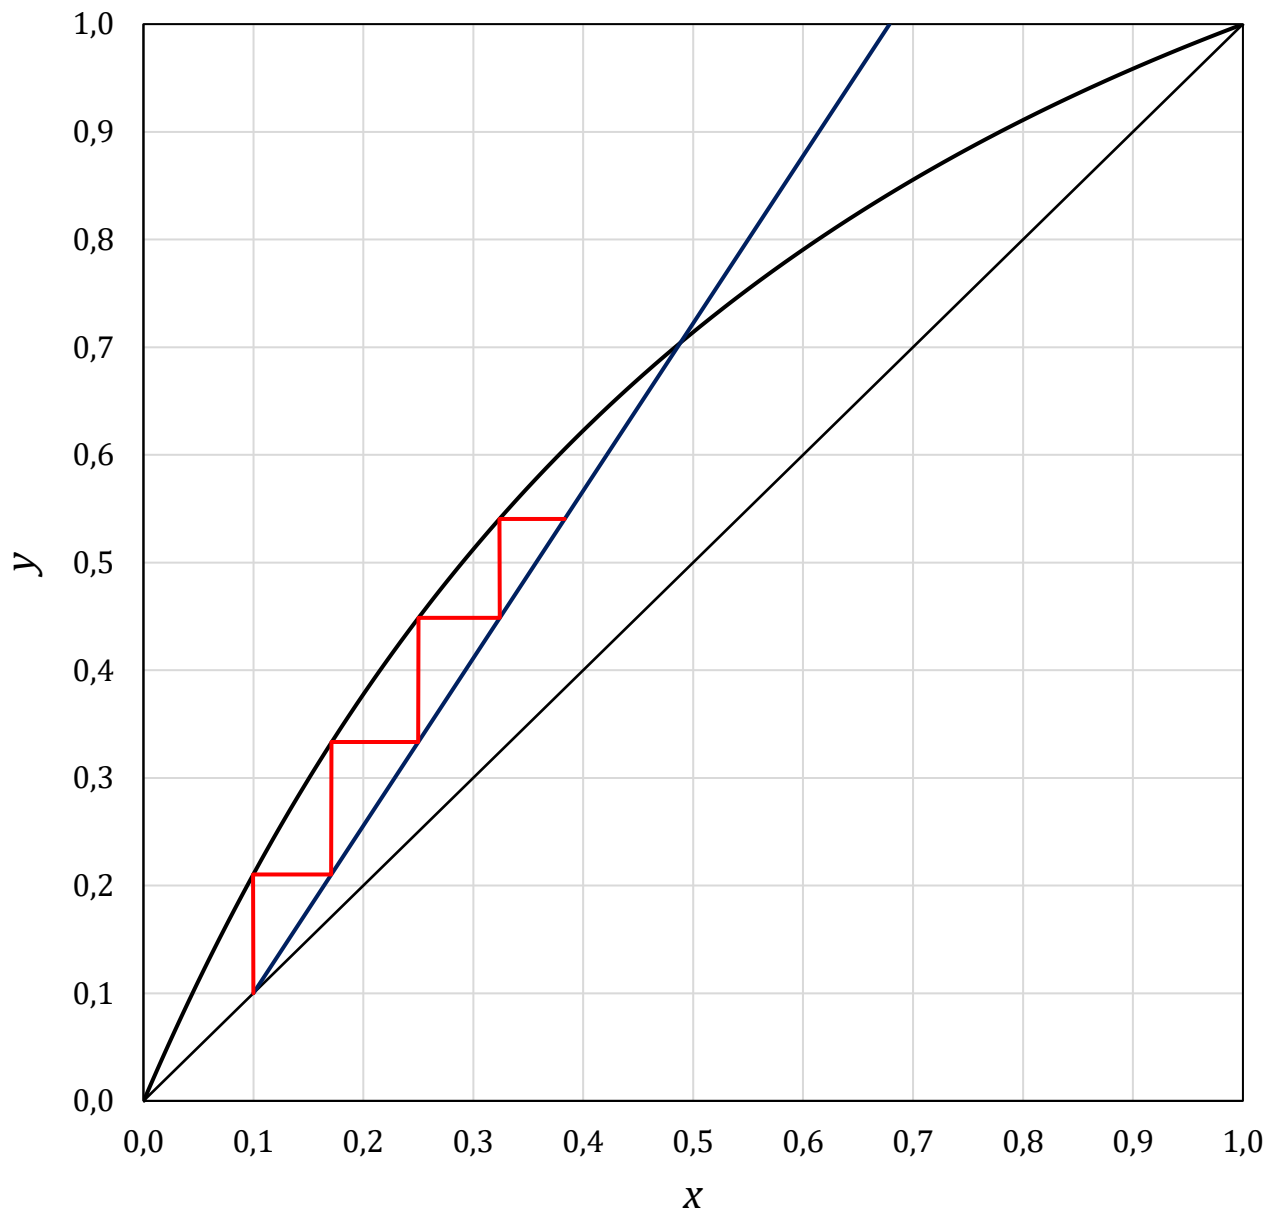



Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

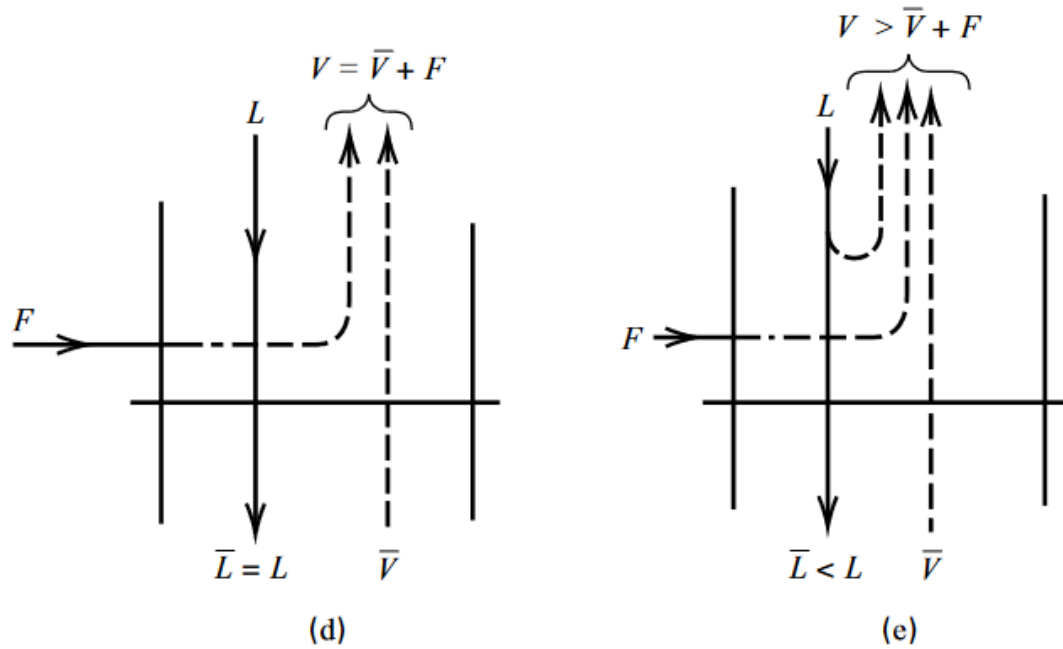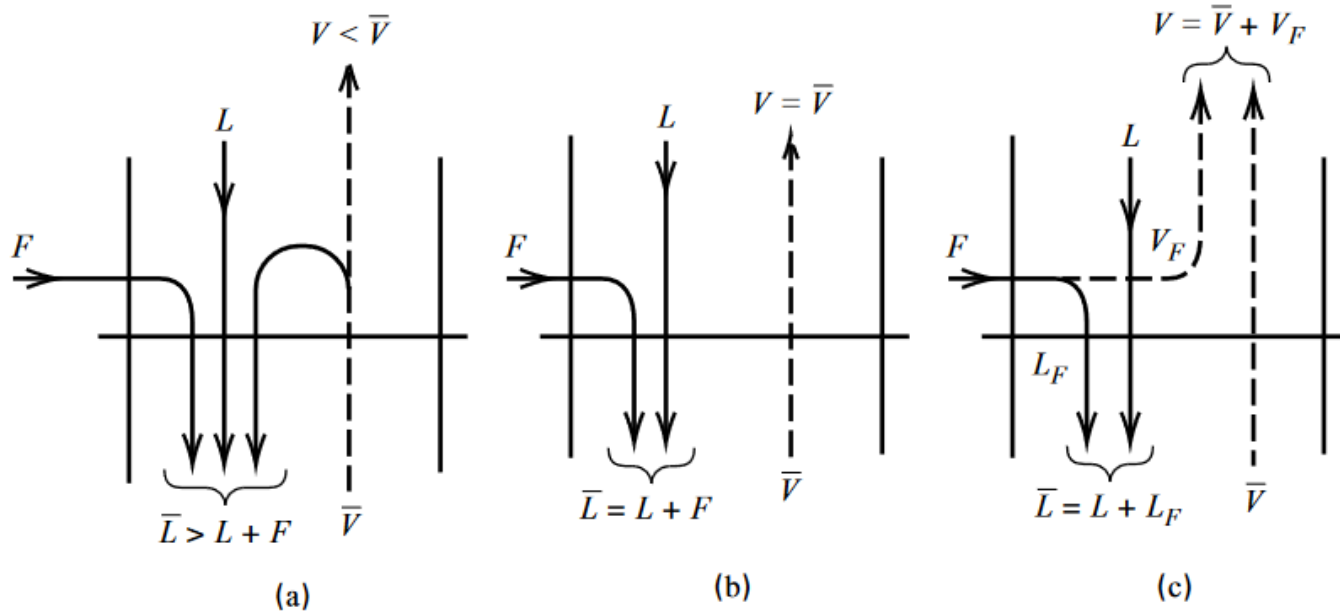


Prato de alimentação: o que acontece...

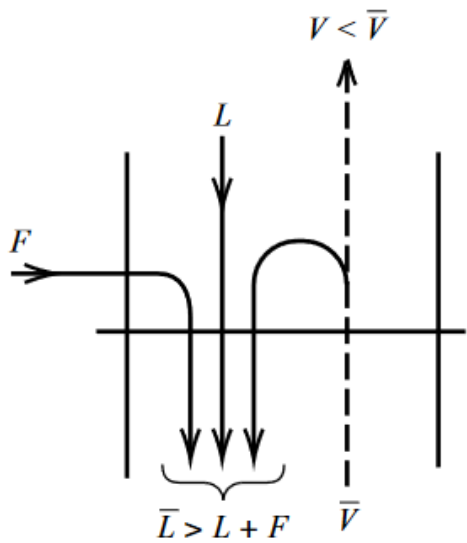

(a)

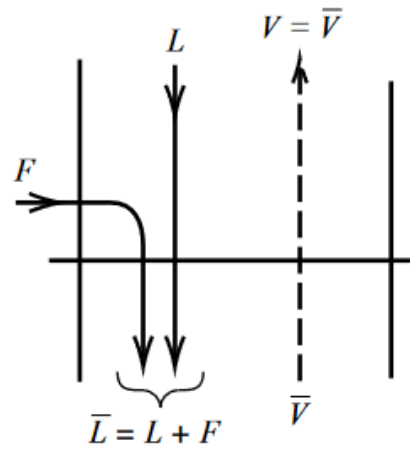


(b)

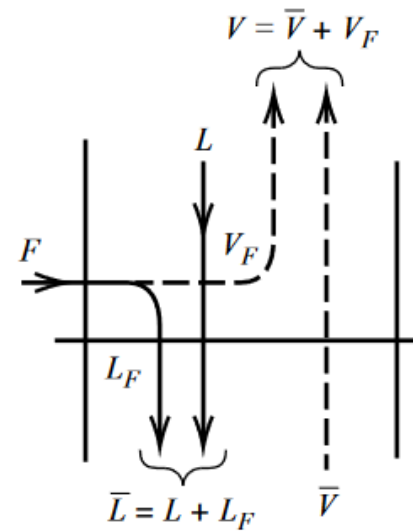


(c)

$$q = \frac{\bar{L} - L}{F}$$

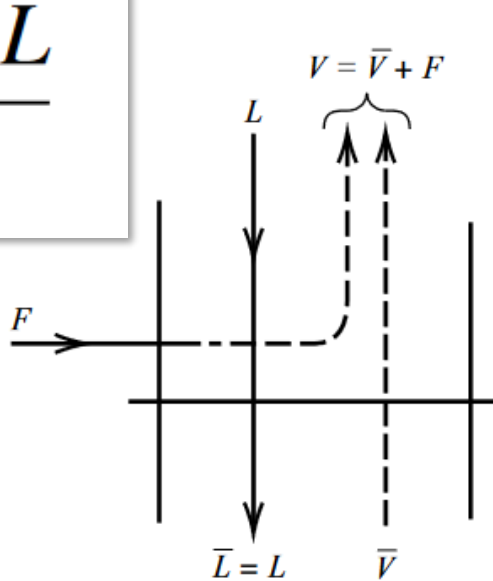

(d)

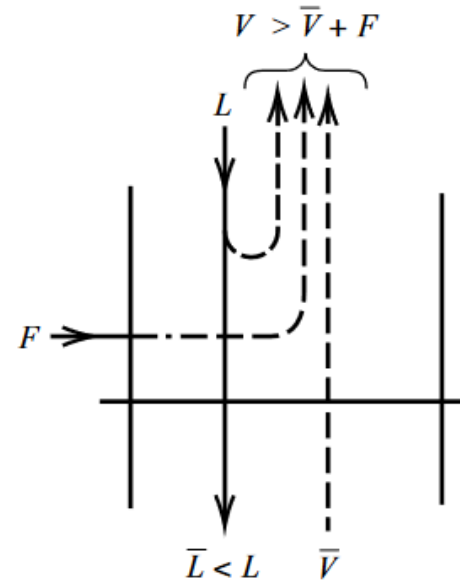

(e)

Prato de alimentação: o que acontece...

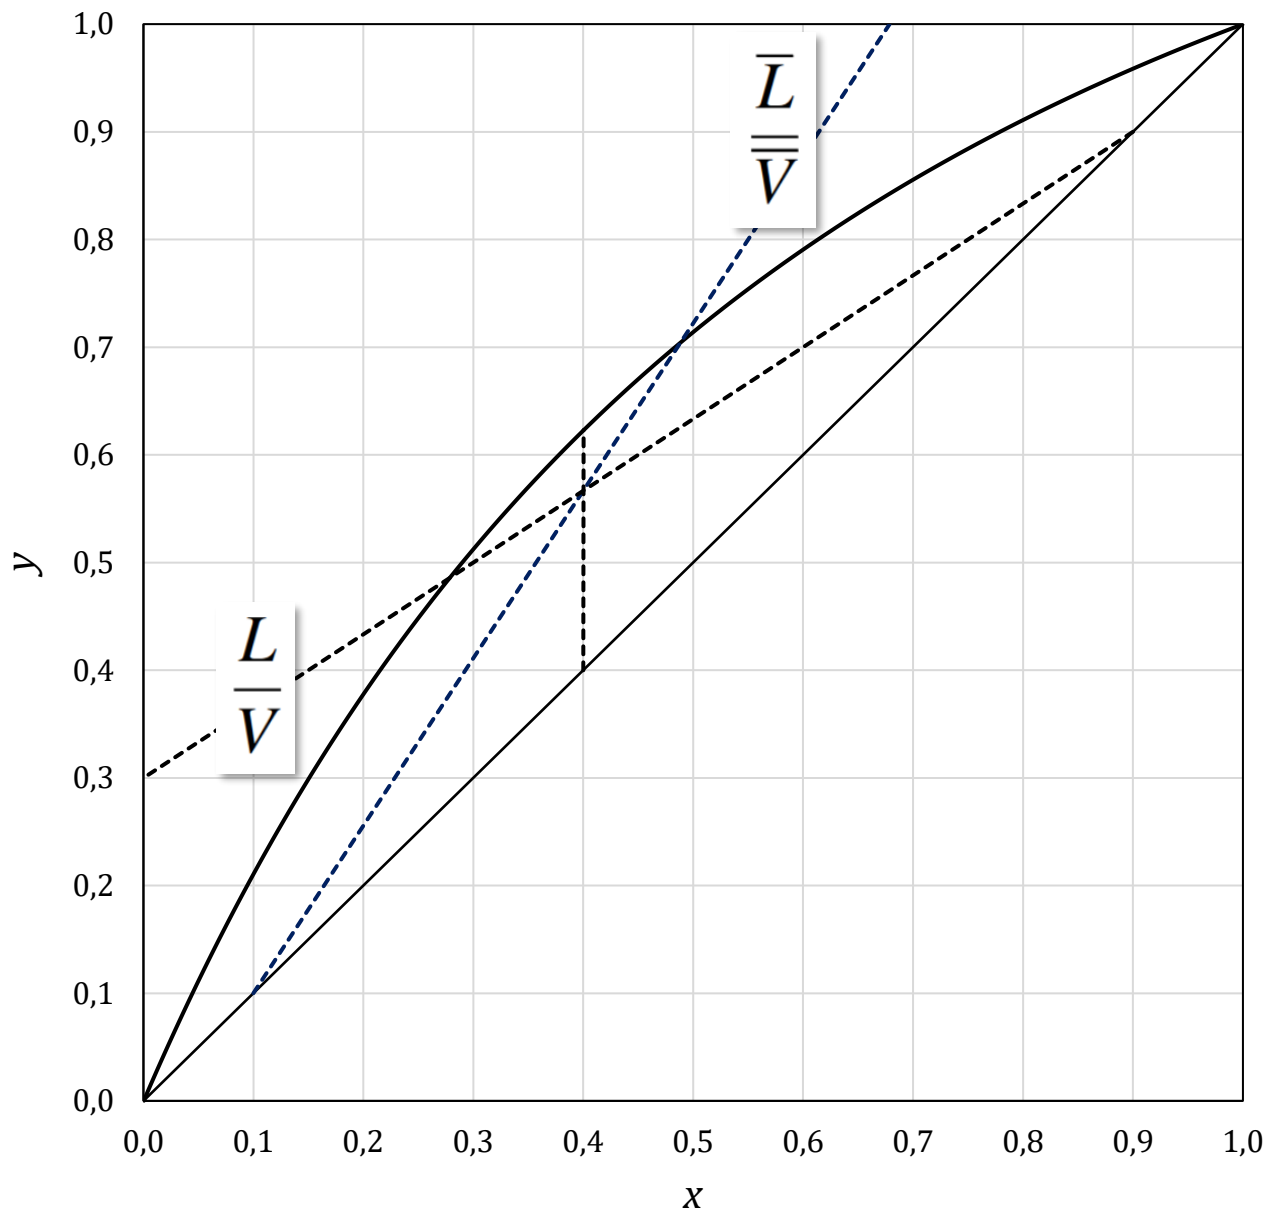


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

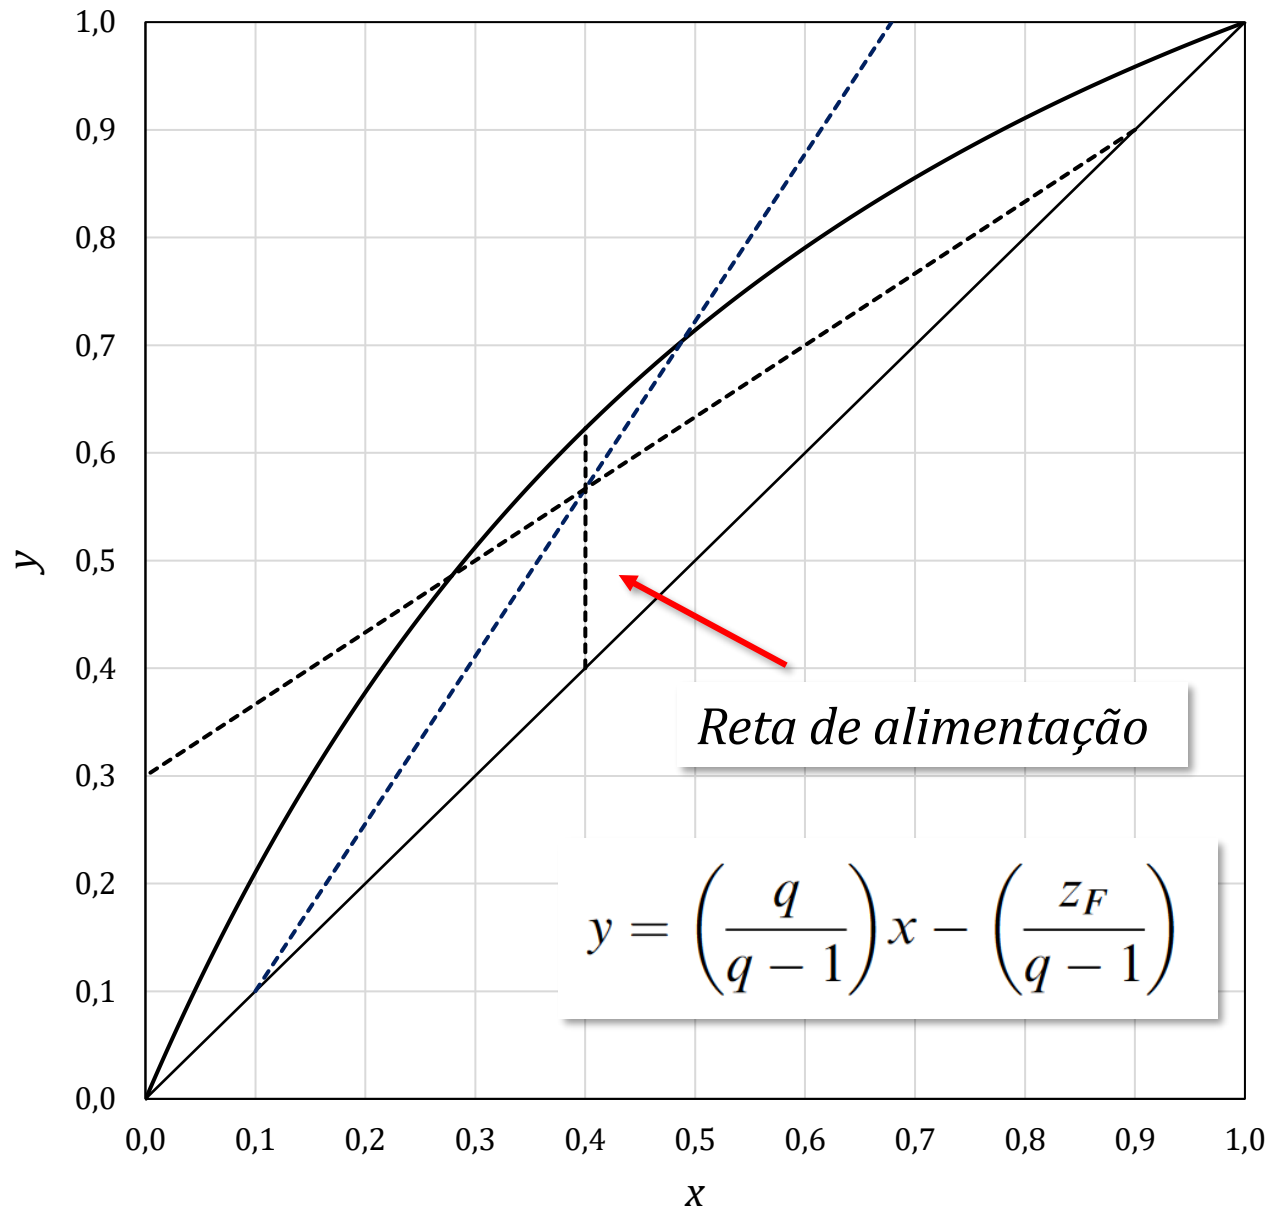


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

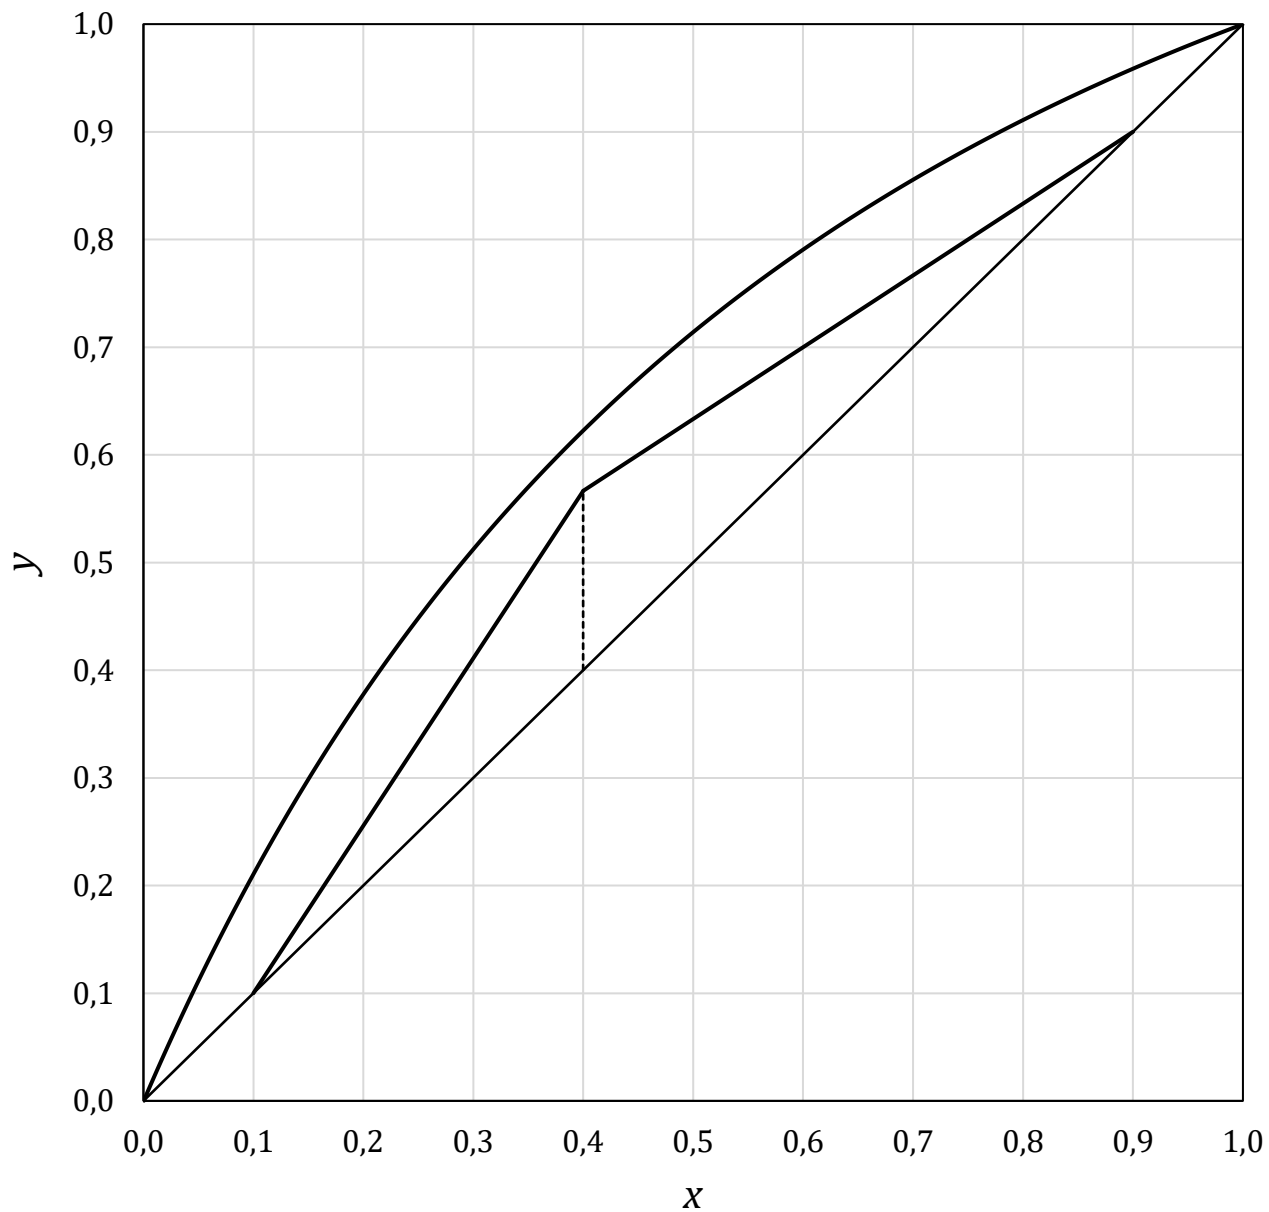


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

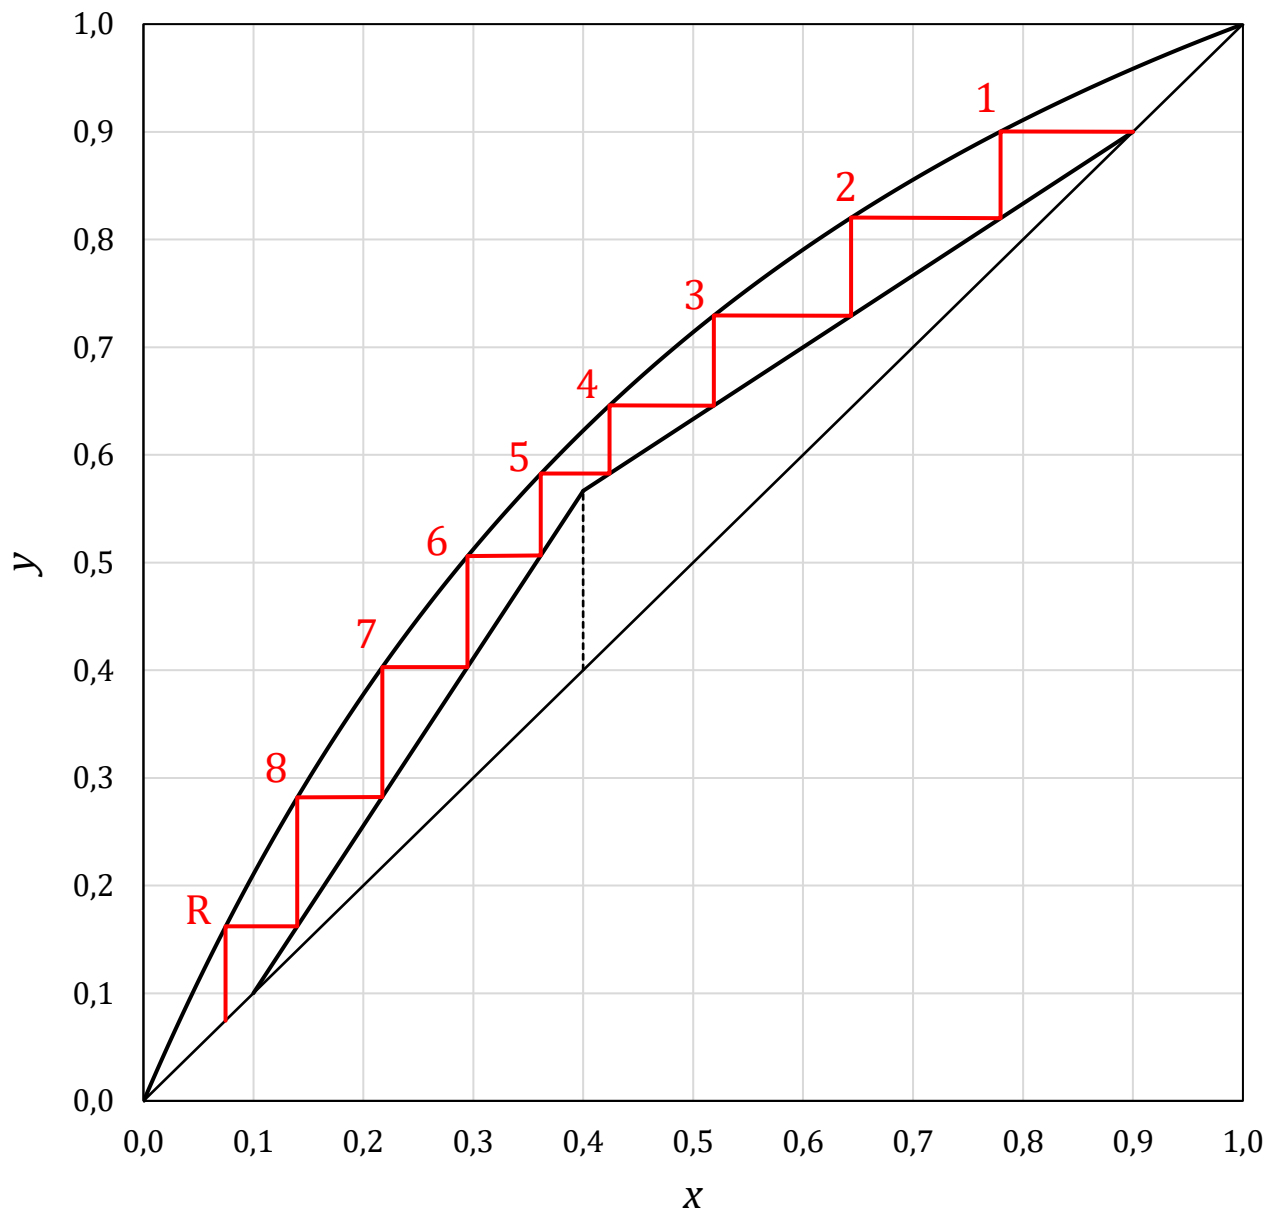


Diagrama xy da mistura benzeno / tolueno a 101,3 kPa

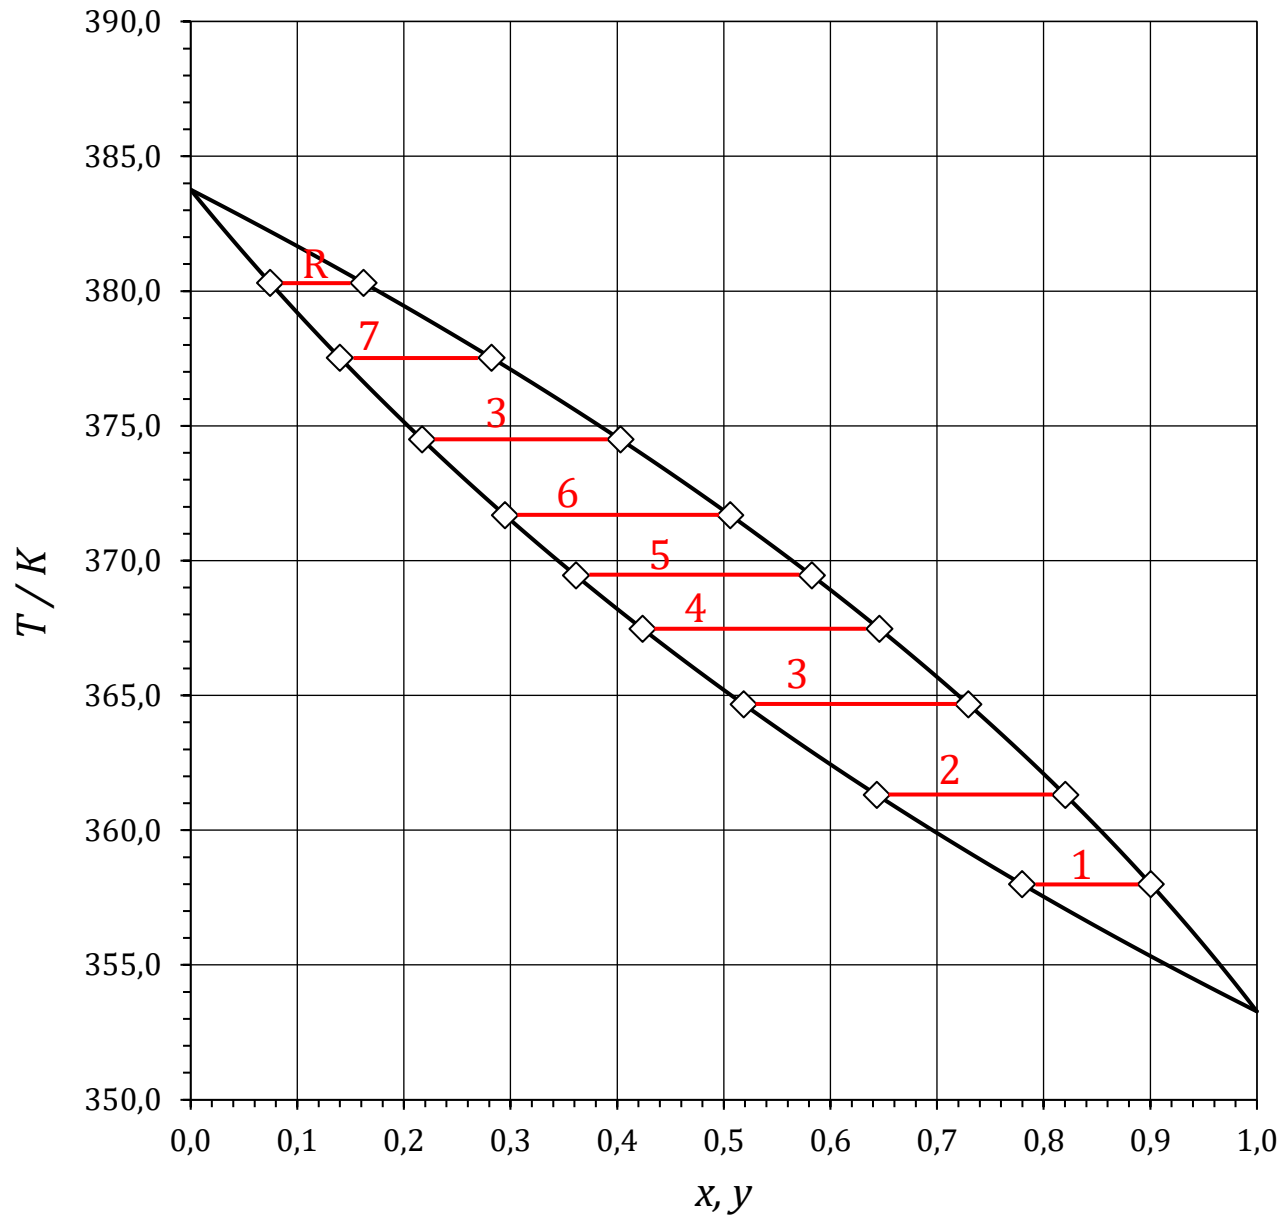


Diagrama Txy da mistura benzene / tolueno a 101,3 kPa